FAMILY RUN BUSINESS ESTABLISHED IN 1997



Packaging Machinery Ltd

pizza capper instruction manual PC2000 & PC2000/EURO MODEL

This manual is produced by Mantle Packaging Machinery Ltd for the benefit of machine users and should be carefully studied prior to installation or operation of the machine, and then kept safely for the training purposes of future operators. Although every effort is made to ensure that the information in this manual is accurate, due to continuing improvement and development, some of the content may differ in some way from the machine that you have. On receipt the machine should be thoroughly inspected and any damage should be notified to the carrier, your supplier or Mantle Packaging Machinery Ltd immediately.

DESCRIPTION & SPECIFICATION

The machine is robustly constructed from quality materials and each unit is guaranteed for 6 months against faulty workmanship. Following years of experience in Food Packaging Machinery, this machine has been manufactured to meet the need for a simple yet workmanlike machine.

INSTRUCTIONS

- 1. Place the Pizza Capper on a flat surface within 2 metres of an electrical supply (13 amp)
- 2. Place the support disk in the central tube of the pizza grill.
- 3. Plug the Pizza Capper in to the electrical supply and switch the amber switch on (lights up).
- 4. Turn the heater control knob to '4', the indicator light (amber) will light up as the machine heats up. Allow 2-3 minutes before the machine is ready for use.
- 5. Place the pizza on a cardboard disc and then place on the support disk.
- 6. Cover the pizza with the correct size of pizza shrink film, hold the film on top of the pizza and allow the heat to shrink the film tight to the pizza and the disk.
- 7. Remove the pizza from the support disk.

WARNING

Do not leave the pizza on top of the support disk for longer than required.

• Always ensure the crumb tray is in position when using the Pizza Capper.

There are hot surfaces (see indicator labels).

ELECTRICAL SUPPLY:-

220/240 Vac: Single Phase: 10 Amps

DIMENSIONS:-

375mm x 375mm x 300mm

MANUFACTURER:-

Mantle Packaging Machinery Ltd



PLEASE SEE THE REVERSE OF THIS MANUAL FOR REPLACEMENT PARTS DIAGRAM

DIRECTIVE 2002/96/EC ON WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT (WEEE)

The WEEE Directive aims to reduce the quantity of waste from electrical and electronic equipment and increase it's reuse, recovery and recycling. Mantle Packaging machines are marked with the "cross out wheeled bin symbol" to ensure they are dealt with separately from general waste. When the machine has reached the end of it's use, please arrange to have it returned to Mantle Packaging Machinery Ltd and we will ensure that it is either recycled correctly or disposed of safely. We will record details of all returned and recycled machines. WEEE Reg No: WEE/DA2698TX

WE ARE PROUD MEMBERS OF









Units 1 & 2 The Sidings, Whalley , Lancashire, BB7 9SE **Tel:** 01254 824992

Email: orders@mantlepackaging.co.uk **Website:** www.mantlepackaging.co.uk


FAMILY RUN BUSINESS ESTABLISHED IN 1997



Packaging Machinery Ltd

pizza capper parts diagram

PC2000 & PC2000/EURO MODEL

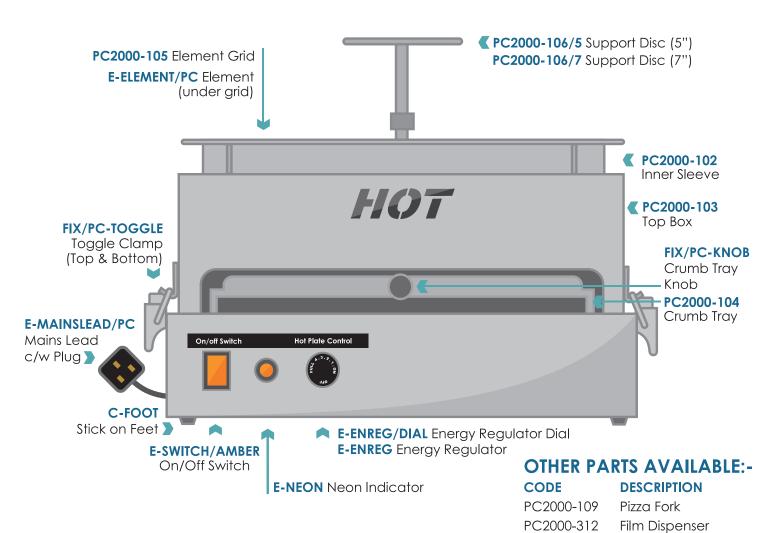

ELECTRICAL SUPPLY:-

220/240 Vac: Single Phase: 10 Amps

DIMENSIONS:-

375mm x 375mm x 300mm

MANUFACTURER:-

Mantle Packaging Machinery Ltd





PC2000-209

WE ARE PROUD MEMBERS OF









Units 1 & 2 The Sidings, Whalley , Lancashire, BB7 9SE **Tel:** 01254 824992 ders@mantlepackaging.co.uk

Internal Wire Harness

Email: orders@mantlepackaging.co.uk **Website:** www.mantlepackaging.co.uk